 


Edifier

M3350

Multimedia Speaker

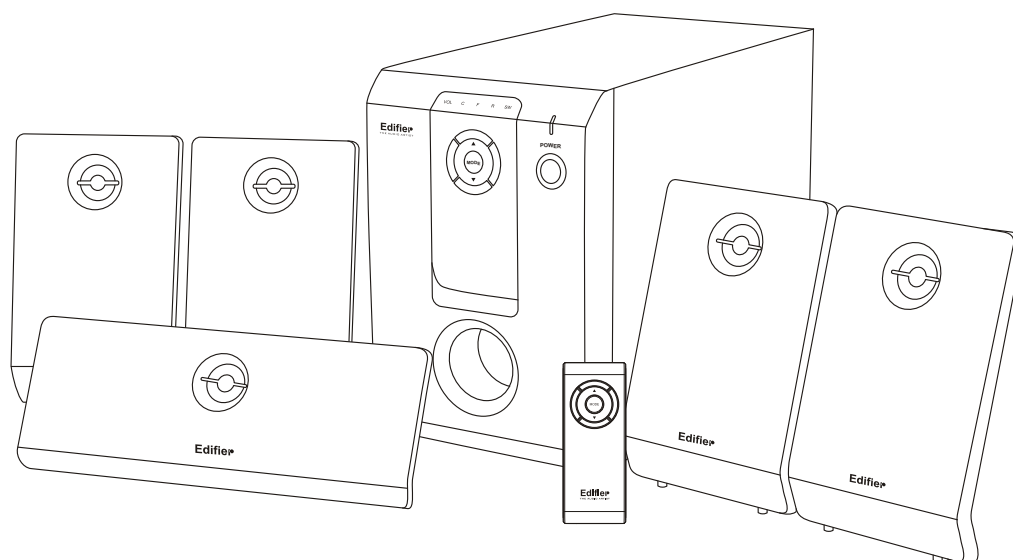

User's Manual

Edifier Enterprises Canada Inc.

Made in China

INTRODUCTION

Congratulations on the purchase of the **Edifier M3350** speaker system. With the right care and attention, you can enjoy many years of high-quality stereo and audio performance.

Before operating the system, please read this manual fully to obtain the best results from your new product.

The lightning flash with arrowhead inside the triangle, is intended to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock to persons.



CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

The exclamation point inside the triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

SAFETY INSTRUCTIONS

Please read all the instructions herein.

Please retain this manual safely for future reference.

Please heed all safety warnings.

Please install in accordance with the manufacturer's instructions.

Please adjust the volume control to a comfortable level to avoid damaging your hearing and the system.

WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK:

- Do not expose this apparatus to rain or moisture.
- Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wider blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- For added protection during lightning storms, unplug the speakers from the electrical outlet and turn off the computer.
- Unplug this apparatus when unused for long periods of time.
- Place the speakers away from all heat sources, such as heaters, stoves, and direct sunlight.
- Do not block the openings in the speaker cabinets. Never push objects into speaker vents or slots. Prevent risk of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.
- Place the speakers in a stable location so that it will not fall causing damage to the speakers or bodily harm.
- Unplug the speakers from the computer and from the electrical outlet before cleaning them with a damp cloth.
- Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Refer all servicing to qualified service personnel only.

One Year Limited Warranty

Edifier warrants to the end user that all of its computer speaker systems are free from defects in material and workmanship in the course of normal and reasonable use for a term of one year from the date of purchase.

This warranty is the exclusive and only warranty in effect relative to Edifier multimedia speaker systems and any other warranties, either expressed or implied, are invalid. Neither Edifier nor any authorized Edifier reseller is responsible for any incidental damages incurred in the use of the speakers. (This limitation of incidental or consequential damage is not applicable where prohibited.)

Edifier obligation under this warranty does not apply to any defect, malfunction or failure as a result of misuse, abuse, improper installation, use with faulty or improper equipment or the use of the speaker systems with any equipment for which they were not intended.

The terms of this warranty apply only to speaker systems when such speakers are returned to the respective authorized Edifier reseller where they were purchased.

Under the terms of this warranty the original consumer purchaser has certain legal rights and may have other rights which vary worldwide.

Copyright © 2006
All Rights Reserved.
Manual Edition 1.0, Mar. 2006
Printed in China

Notice

Edifier and Edifier logo are owned by Edifier Enterprises Canada Inc. and may be registered. And other brand names and trademarks are the property of their owners. Edifier assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

Introduction:

- * Completely MDF wooden cabinet for subwoofer.
- * 5" high performance woofer.
- * 3" midrange, 3/4" tweeter driver.
- * Front panel key-press adjust and remote adjust.
- * Magnetically shield drivers.

 
Open the packing

Please check the speaker Model number marked on the packing carton. Please contact the seller as soon as possible if you find the speaker is the incorrect model or has sustained shipping damage.

* **M3350 packing list:**

- ☒ 1 x Subwoofer
- ☒ 5 x Satellite speakers(with cable)
- ☒ 1 x RC35 remote controller
- ☒ 2 x AAA batteries
- ☒ 3 x 3.5/3.5 audio connecting cable
- ☒ 3 x 3.5/2 RCA audio connecting cable
- ☒ 1 x User's Manual


* **Overview**

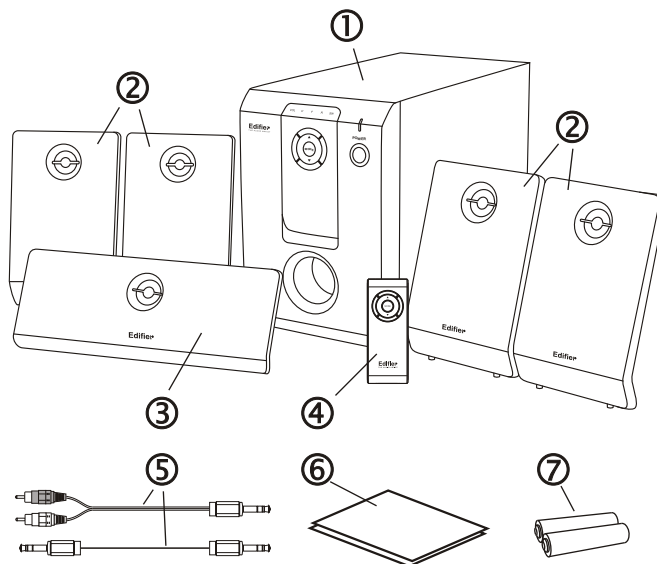

- 1: Subwoofer
- 2: Satellite(4 PCS)
- 3: Center satellite
- 4: RC35 remote controller
- 5: Audio connecting cable
- 6: User's Manual
- 7: Battery



 Introduction of frontpanel

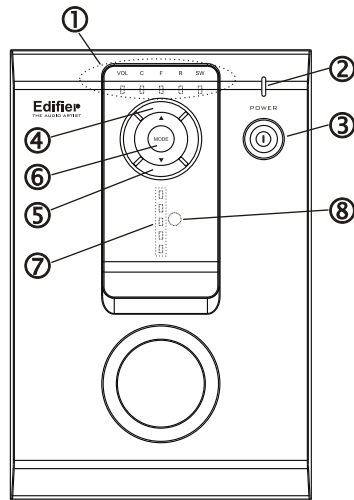

1: State indicator:

“VOL” LED is on , the system is in the state of adjusting volume .

“C” LED is on , the system is in the status of center volume fine-tuning.

“F” LED is on , the system is in the status of front Volume fine-tuning.

“R” LED is on , the system is in the status of surround volume fine-tuning.

“SW” LED is on , the system is in the status of bass fine-tuning.

2: Power indicator

3: Powerswitch

4: “▲” volume up key: increase the volume and the other volume.

5: “▼” volume down key: decrease the volume and the other volume.

 
6: “MODE” function key: change the adjusting status of the system; the system is in the status of the volume adjusting when power supply is turned on , at the same time the “VOL” indicator is on; press the “MODE” key in turn, the status indicator can circle by VOL-C-F-R-SW-VOL.

7: VOLUME indicator: display the volume from bottom to top , the volume is the most when the 5 LED are all on and the volume is the least when the 5 LED are off (the volume is in the middle when the 3 LED are on that the system default.) EXPLAIN: the indicator have no change when you adjust the other channel volume in the fine-tune state .

8: Sensor of the remote controller.



Introduction of backpanel

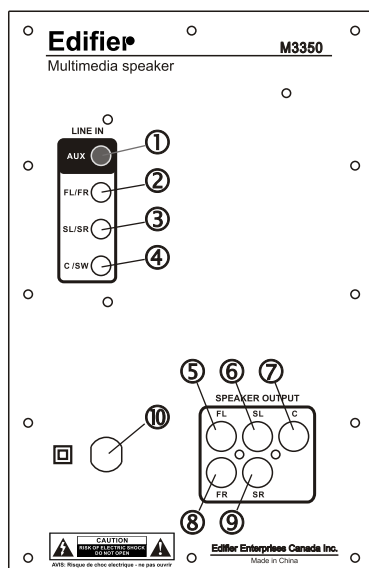

1: AUX signal input port

2: Front left/right signal input port

3: Surround left/right signal input port

4: Center/bass signal input port

5: Front left satellite output port

6: Surround left satellite output port

7: Center satellite output port

8: Front right satellite output port

 
9: Surround right satellite output port

10: Power cord

Introduction of remote controller

Please make sure the infrared transmitter of the remote is pointing towards to the receiver area of the amplifier front panel.

Please use remote within 7 meters (20ft.) from the Amplifier

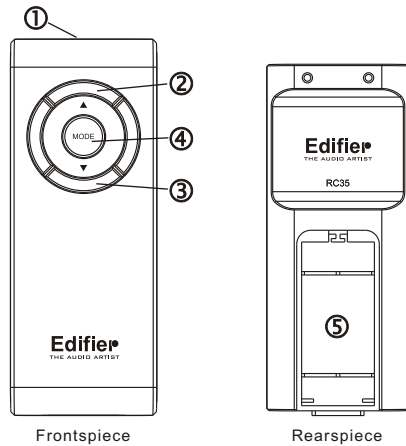

- 1、sensor of remote
- 2、“▲” volume up key
- 3、“▼” volume down key
- 4、“MODE” function key
- 5、Battery holder

 
Inserting the batteries into the remote controller:

Insert two 7#(size AAA) batteries by matching the + and - on the batteries.

Note:

- 1、Do not leave the remote near an extremely hot or humid place.
- 2、When the remote no longer operates the player, replace all the batteries with new ones.
- 3、If you don't use the remote for an extended period of time ,remove the batteries to avoid possible damage from battery leakage and corrosion.

CONNECTING:

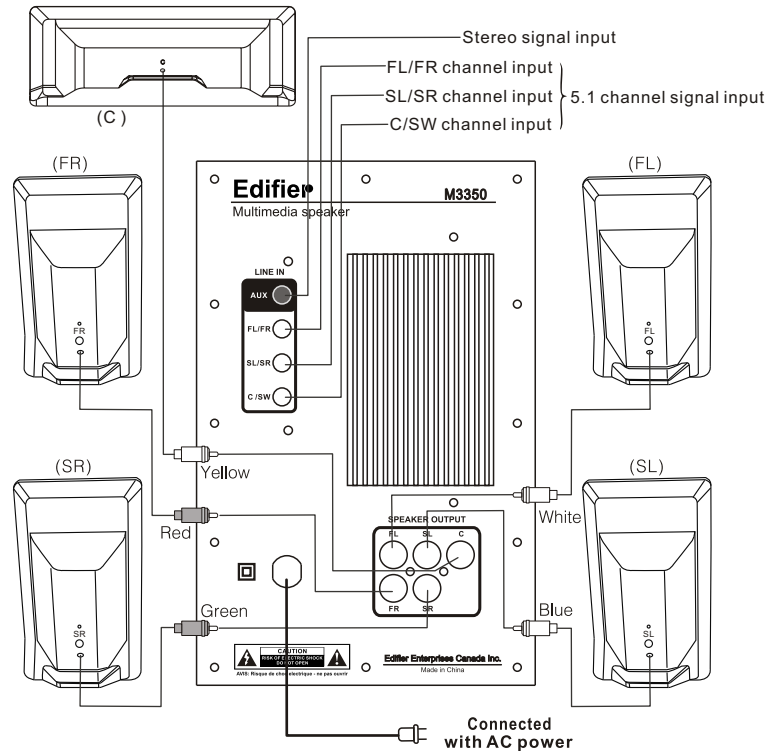

1、Connect the satellites

Connect the satellite speakers to the output splints on the back panel of the Sub-woofer. Please note to match the color, the cord with red sign to the red output.

2、Connect the subwoofer to the Audio device

- 2 channel signal input by AUX port, output analog 5.1 signals;
- 2 channel signal input by AUX port, output analog 2.1 signals;
- 5.1 channel audio signal input by FR/FL,SR/SL and C/SW;

3. Playing the audio device

Plug the power cord into the AC outlet and turn on the power switch, the system enters the status of adjusting volume and starts playing, the power indicator and "VOL" indicator is on, press the "▲" and "▼" key, the volume can be increased or decreased (or turned off); press the "MODE" function key, the "C" indicator is ON and "VOL" indicator is off, the system enters fine-tuning status of center, at the same time, press the "▲" and "▼" key, the center volume can be adjusted imperceptibly; Press the "MODE" key again, the "F" indicator is on, the "C" indicator is off, the system enters the status of front fine-tuning, press "▲" and "▼" key, the front volume can be adjusted imperceptibly; Press the "MODE" key again, the "R" indicator is on, the "F" indicator is off, the system enters the status of surround fine-tuning, press "▲" and "▼" key, the surround volume can be adjusted imperceptibly; Press the "MODE" key again, the "SW" indicator is on, the "R" indicator is off, the system enters the status of bass fine-tuning, press "▲" and "▼" key, the bass volume can be adjusted imperceptibly; when you press the "MODE" key again, the system returns the status of volume, the system will circle according to the above order.



SPECIFICATIONS:

Power output:

RMS 5W×4+10W+15W(THD=10%)

Signal to noise ratio: ≥80dBA

Input port: 3.5mm Stereo Line-in

Input impedance: 10Kohm

Adjust mode: Front key, remote

Bass unit: Magnetically shielded, 5 inch paper cone, 4ohm

Mid-range unit: Magnetically shielded, 3 inch paper cone, 4ohm

Tweeter unit: Magnetically shielded, 3/4 inch, 8 ohm

Input power: Refer to the rear panel

Subwoofer dimensions:

155(W)×235(H)×339(D)mm

Satellite dimensions:

110(W)×180(H)×70(D)mm

Center dimensions:

251(W)×90(H)×64(D)mm

Weight: About 7.8kg



TROUBLESHOOTING:

No sound from any speakers:

Is there power to the system?

Ensure that your subwoofer is plugged securely into a working AC wall outlet and power indicator is on.

Ensure that the power switch on the subwoofer is on.

Are you receiving an Audio Signal?

Connect your speakers to an alternate audio source, such as portable CD player or walkman to determine that your speakers are working.

Popping/Buzzing/Humming from the System:

Are your cable connections secure?

Ensure the input cable is snugly inserted into the input socket on the rear of the subwoofer.

Try plugging the system into a different AC wall outlet.

Note: A slight low level of hum or vibration is normal as the subwoofer contains a transformer.

Distorted, Little, or No Sound in One or all Satellite Speakers:

Are your Soundcard Settings Properly Configured?

Ensure your computer has the latest soundcard drivers from the manufacturer.

Most computers contain a standard two-channel soundcard and will not require any adjustments to the speaker configuration.

Adjust your computer's internal volume settings for left-right balance.

Ensure that there are nicks, cuts, kinks in your input cable.

Jiggle the cables at the subwoofer input sockets whilst playing music through the system to detect a break in the audio signal.

Adjust the master volume control whilst playing music through the system to determine whether the level of distortion changes.

Determine if the problem persists in the same channel or moves to the opposite channel when the left and right speaker connections are reversed.

No sound or weak bass from the subwoofer:

Is the bass volume too low?

Adjust your computer's internal treble and bass volume settings to mid-level.

Edifier